




CARD SHREDDER

OPERATING INSTRUCTIONS:

CONTROLS

START commence shredding operation forward	STOP Discontinue operation & stop rollers	REVERSE Change direction of rollers

POWER SWITCH (ON/OFF)



WARNING !

- Rotating parts can cause severe injury!
- Stay away & do not touch while motors are in operation.
- Keep hands, feet, hair and clothing away from all moving parts to prevent injury.
- Never operate device with frame covers removed.
- Turn the power off immediately with STOP switch and disconnect the power cable.
- Do not feed metal or fluidmaterials inside the device.



LOADING BAY

While in STOP switch position, place and preload up-to 16-20 decks of playing cards into twin loading bay towers. Turn switch to START position to commence shredding.

SHREDDED OUTPUT

Once shredded, cards are unloaded and slide down & out from the sloped exit.